


Please use a multi stranded cable for all connections

Connection Diagram

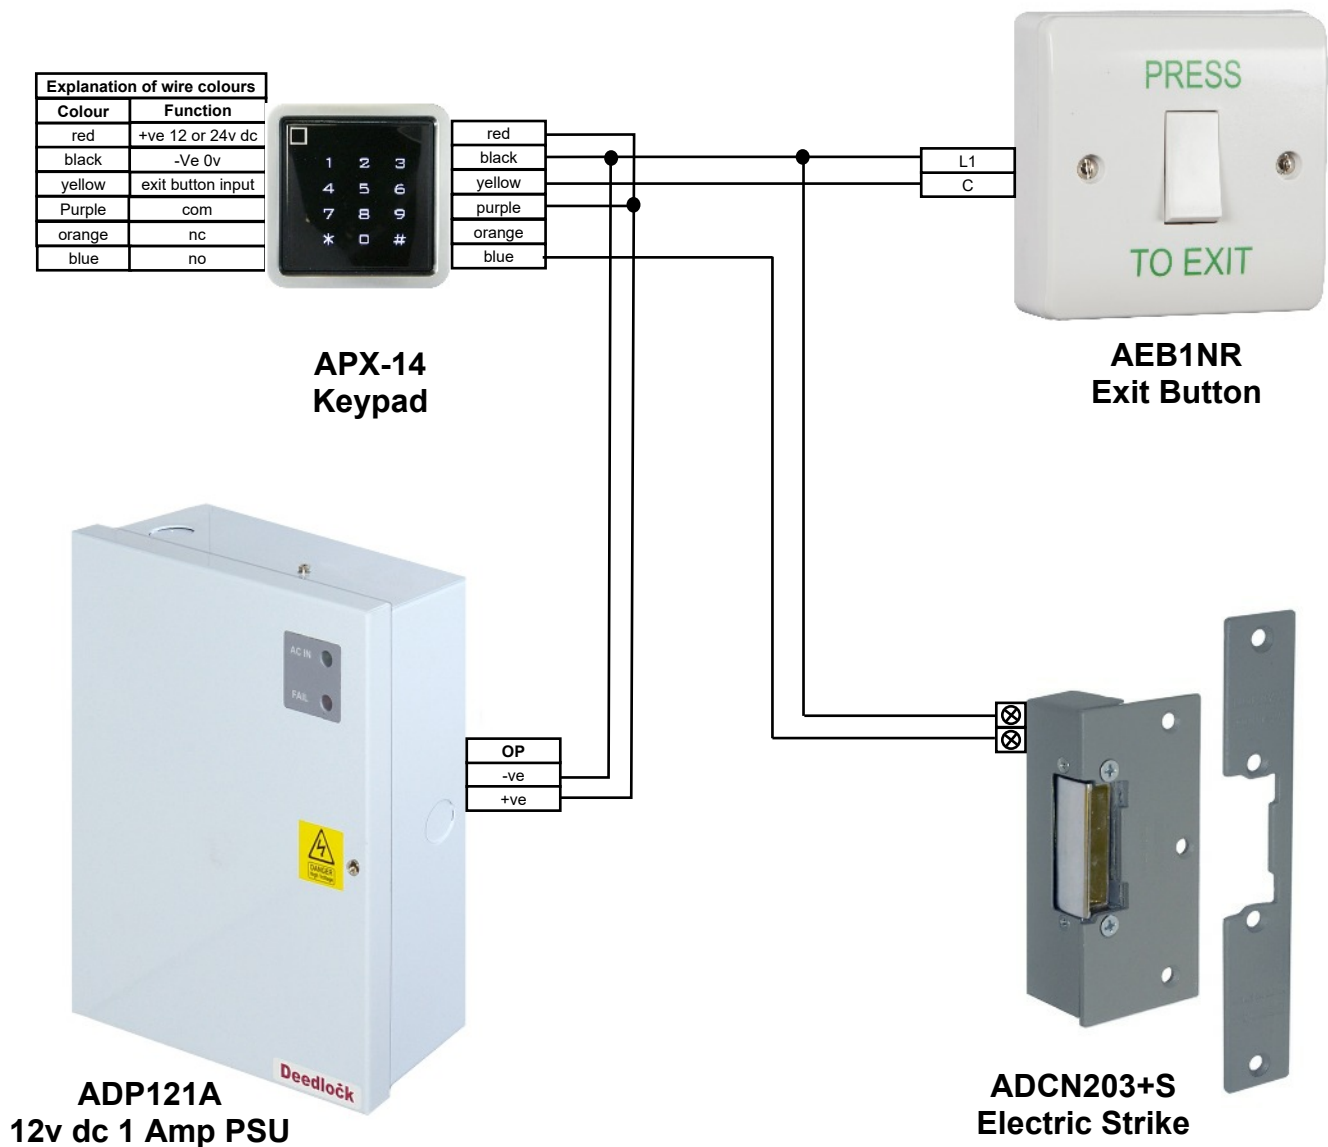

The APX-14 can be programmed with codes and/or fobs into individual slots. Fobs sold seperately
You can then delete Individual fobs later so long as you have recorded which slots they are in.
If adding a code and fobs you should program the code into slot 1 and fobs in to subsequent slots

To Enter programming mode

From a flashing red * 999999 # the led should turn green then solid red.

To leave programming mode

Press * the led should go back to flashing red.

To Program a code to unlock the door

* 999999 # (enters programming mode)

1 1 # (4-6 digit code - 1234 cannot be used) # adds a user code into slot 1

* (Leaves programming mode)

To Program fobs to unlock the door

* 999999 # (enters programming mode)

1 2 # (present fob to reader and take away) # adds a fob into slot 2

1 3 # (present fob to reader and take away) # adds a fob into slot 3

1 4 # (present fob to reader and take away) # adds a fob into slot 4

Continue until finished adding fobs

* (Leaves programming mode)

To change the lock open time

* 999999 # (enters programming mode)

4 (0 - 99 seconds - 5 is the default) #

* (Leaves programming mode)

To change the code

* 999999 # (enters programming mode)

2 1 # # (deletes the user code in slot 1)

1 1 # (4-6 digit code - 1234 cannot be used) # (adds a user code into slot 1)

* (Leaves programming mode)

To delete a particular fob

* 999999 # (enters programming mode)

2 2 # (deletes the fob in slot 2)

2 3 # (deletes the fob in slot 3)

* (Leaves programming mode)

To delete all fobs and the code

* 999999 # (enters programming mode)

2 0000 # (deletes all fobs and code)

* (Leaves programming mode)

There is a light sensor on the back for tamper alarm. To disable cover with black insulation tape