


Connections

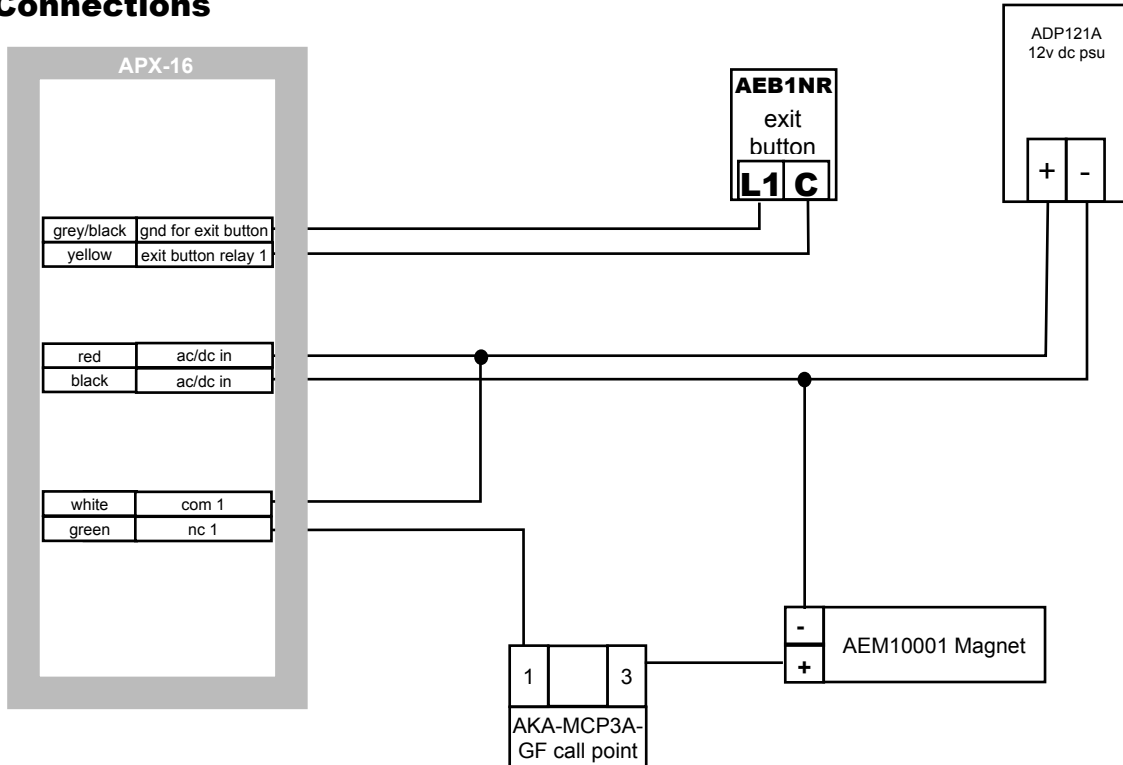

Summary

This unit contains two relays.

Relay one can have 1100 codes. Relay two can have a further 200 codes.

Activation of relay one turns the led to green.
Activation of relay two turns the led to blue.

When programming codes they are allocated against a "user id" number. This "user id" number is then used when deleting codes. Please ensure you maintain a list of codes allocated to each "user id"

Basic Programming

From standby mode (led flashing red)

Enter Programming mode

[*] [888888] [#] (led solid)

To add an access code from relay one
[1] [user id (1-1100)] [#] [4 digit code] [#]

Leave Programming mode

Press [*] until led back to flashing red

Extended Programming

From standby mode (led flashing red)

Enter Programming mode

[*] [888888] [#] (led solid)

To set relay one lock open time (default is 5 seconds)
[4] [1] [lock open time (1-99 secs)] [#]

To set relay one to toggle mode
[4] [1] [0] [#] ie zero lock open time toggles relay.

To delete code
[2] [user id number] [#]
Repeat above line to delete additional codes

To restore unit to factory default leaving data intact
Power up unit with [*] held in until 3 beeps are heard

To delete all codes
[2] [0000] [#] Deletes all data from relay 1
[9] [0000] [#] Deletes all data from relay 2

Leave Programming mode

Press [*] until led back to flashing red